



BARRE ASSEMBLY TAPS



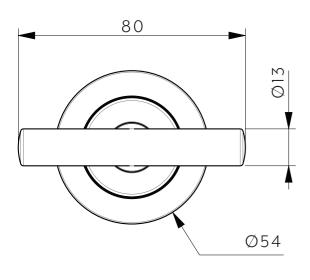

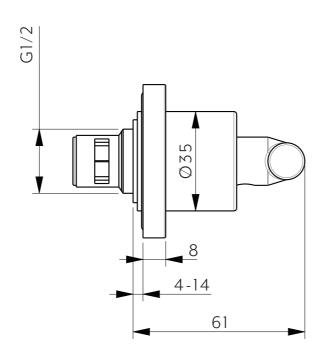

Note: Dimensions are nominal measurements only

SPECIFICATIONS	
RECOMMENDED USE	Domestic
PRESSURE RATING	Recommended minimum working pressure 0.2 Bar Recommended maximum working pressure 5 Bar Hot and cold water inlet pressure should be equal
TEMPERATURE RATING	Maximum continuous working temperature 75°C If the water temperature exceeds 75°C, an approved tempering valve must be fitted
SUITABLE HOT WATER UNITS	Storage tank: Yes Continuous Flow: Yes Gravity Feed: Suitable
STANDARDS	Nominal Flow Rate(5.5 L/M)

Disclaimer: Products in this specification manual must by regulation be installed by licensed and registered trade people. The manufacturer/distributor reserves the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. Dimensions and set-outs listed are correct at time of publication however the manufacturer/distributor takes no responsibility for printing errors. All ABI Products are designed in Australia. Copyright ABI Interiors Pty Ltd 2021.

INSTALLATION GUIDE

Note: This product must be installed by a licensed tradesperson. This is a general installation guide - there are many factors that are involved that can alter the installation method. The standards in your respective country must be adhered to by your licensed tradesperson






New Build

Install breach in desired position.


Retrofitting Existing

Remove existing tapware & reseat existing body seats until shiny & smooth.


Screw spindle into breach and hand tighten until rear of spindle meets the body seat, **be sure not to overtighten**. If necessary apply more pressure lightly with spanner. (Note: Locking nut must be removed prior to installing this part of the spindle)

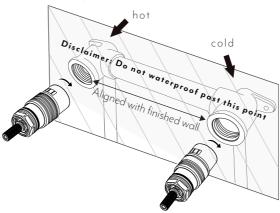



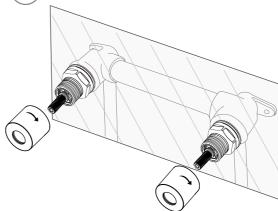

Install handle by using the allan key provided and tighten grub screw.

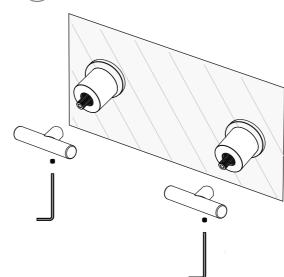





Fit the fibre washer over the spindle.


Screw on the locking nut and tighten with spanner.

TEST AND CHECK FOR LEAKS

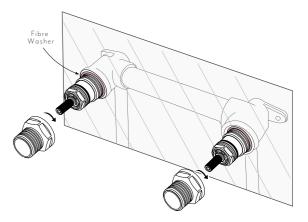

Slide the dress plate over the sleeve and press against wall.

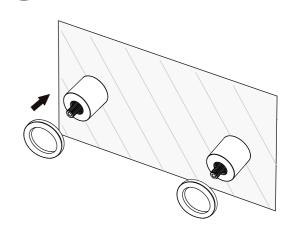

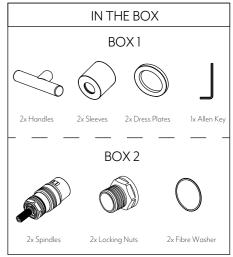

*Extended spindle available on our website