

Note: Dimensions are nominal measurements only

| SPECIFICATIONS | |
|--------------------------|---|
| RECOMMENDED USE | Domestic, Commercial |
| MATERIAL | Solid Brass |
| PRESSURE RATING | Recommended minimum working pressure 0.2 Bar Recommended maximum working pressure 5 Bar Hot and cold water inlet pressure should be equal |
| TEMPERATURE RATING | Maximum continuous working temperature 75°C If the water temperature exceeds 75°C, an approved tempering valve must be fitted |
| SUITABLE HOT WATER UNITS | Storage tank: Yes Continuous Flow: Yes Gravity Feed: Suitable |
| STANDARDS | Nominal Flow Rate (6 L/M) |

NOTE: PRODUCT DOES NOT INCLUDE FILTER OR FILTER CONNECTION FITTINGS.


Disclaimer: Products in this specification manual must by regulation be installed by licensed and registered trade people. The manufacturer/distributor reserves the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. Dimensions and set-outs listed are correct at time of publication however the manufacturer/distributor takes no responsibility for printing errors. All ABI Products are designed in Australia. Copyright ABI Interiors Pty Ltd 2021.

INSTALLATION GUIDE


Note: This product must be installed by a licensed tradesperson. This is a general installation guide - there are many factors that are involved that can alter the installation method.

INSTALLATION MANUAL


Tools you will need:

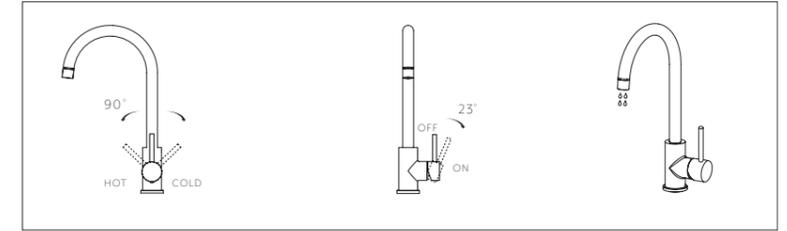


1 The hole dimension as 35mm

 


2 Fix the bolts to the bottom of the body, tighten it with a screwdriver.

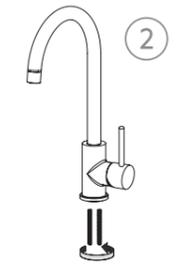



3 Put the faucet into the hole. Pass the horseshoe plates through the bolts, fasten the nuts and tighten

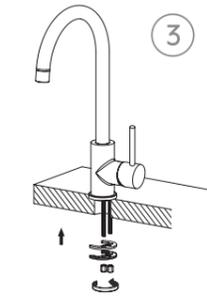

4 As shown in the figure, connect the flexible hoses

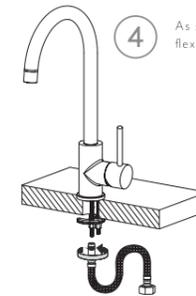

5 Attach the two flexible hoses to water supply

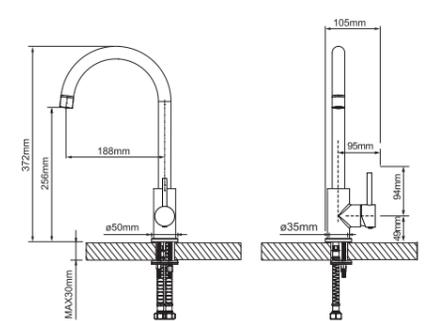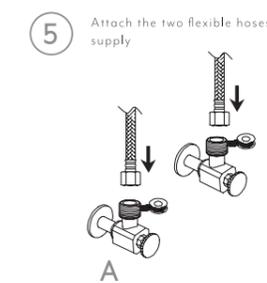

EXPLODED VIEW

- Item Description Code
- 1 Spout
- 2 Rubber O-Ring
- 3 Aerator
- 4-8 Outlet & Connections
- 9 Grub Screw
- 10 Body
- 11 Dress Ring
- 12-13 Flexible Hoses
- 14 Horse Shoe Plate
- 15 Cartridge
- 16 Locking Nut
- 17 Dome
- 18 Cap
- 19 Grub Screw
- 20 Handle


High Pressure



Low Pressure



Unscrew spout tip to change aerator for alternative pressure option.

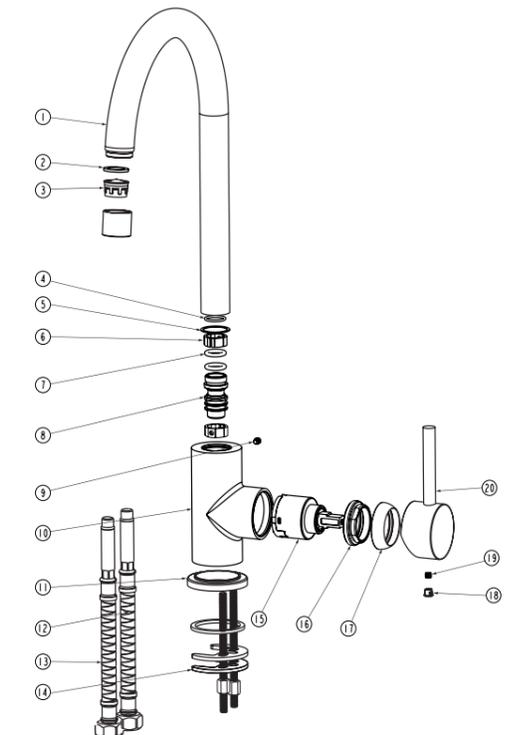

Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive



DO NOT use cleaning pads with abrasive surfaces as this may scratch the material