

Front View

**Note:** Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE	Domestic
MATERIAL	Solid Brass
TEMPERATURE RATING	Maximum continuous working temperature 75°C If the water temperature exceeds 75°C, an approved tempering valve must be fitted
PRESSURE RATING	Recommended minimum working pressure 150kPa Recommended maximum working pressure 500kPa Hot and cold water inlet pressure should be equal
FUNCTION	1/4 turn (clockwise & anti-clockwise spindle in set)

Disclaimer: Products in this specification manual must by regulation be installed by licensed and registered trade people. The manufacturer/distributor reserves the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. Dimensions and set-outs listed are correct at time of publication however the manufacturer/distributor takes no responsibility for printing errors. All ABI Products are designed in Australia. Copyright ABI Interiors Pty Ltd 2021.

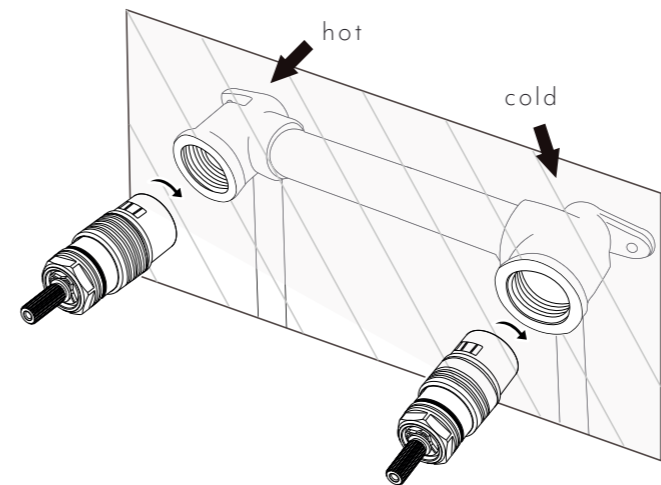
INSTALLATION GUIDE

Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors that are involved that can alter the installation method.

1


**New Build**  
Install breach in desired position.

**Retrofitting Existing**  
Remove existing tapware & reseal existing body seats until shiny & smooth.  
  
Screw spindle into breach and hand tighten until rear of spindle meets the body seat, **be sure not to overtighten**. If necessary apply more pressure lightly with spanner. (Note: Locking nut must be removed prior to installing this part of the spindle)






2

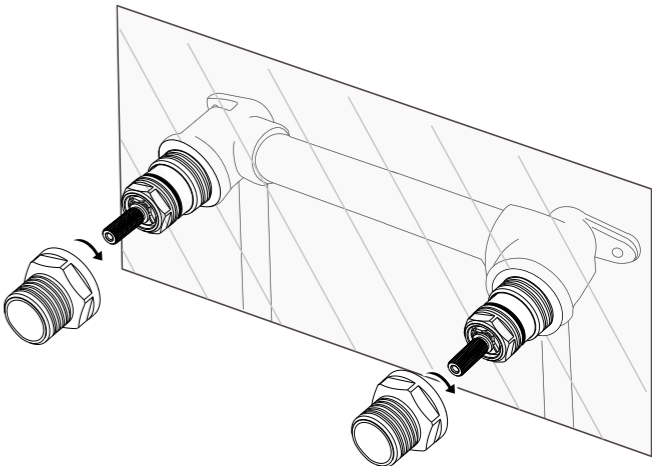Screw on the locking nut and tighten with spanner.  
  
TEST AND COMMISSION .  
ENSURE THERE ARE NO LEAKS.



3

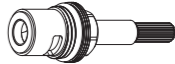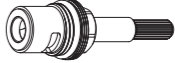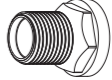Continue with the installation of the handles.  
\*See the install guide specific to your handle design

IN THE BOX	
	x1 Hot Spindle (turn clockwise on)
	x1 Cold Spindle (turn anti-clockwise on)
	x2 Locking Nut

\*Your spindle will come assembled with the locking nut attached