

**Note:** Dimensions are nominal measurements only

## SPECIFICATIONS

### RECOMMENDED USE

Domestic

### TEMPERATURE RATING

Maximum continuous working temperature 75°C  
If the water temperature exceeds 75°C, an approved tempering valve must be fitted

### PRESSURE RATING

Recommended minimum working pressure 150kPa  
Recommended maximum working pressure 500kPa  
Hot and cold water inlet pressure should be equal


### STANDARDS

WELS Star Rating (5Star) – Nominal Flow Rate(6L/min)  
Registration No.(T38391)

Disclaimer: Products in this specification manual must by regulation be installed by licensed and registered trade people. The manufacturer/distributor reserves the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. Dimensions and set-outs listed are correct at time of publication however the manufacturer/distributor takes no responsibility for printing errors. All ABI Products are designed in Australia. Copyright ABI Interiors Pty Ltd 2021.

## INSTALLATION GUIDE

Note: This product must be installed by a licensed plumber. This product install must comply with AS/NZS 3500, for installs outside Australia and New Zealand, the standards in your respective country must be adhered to by your licensed tradesperson

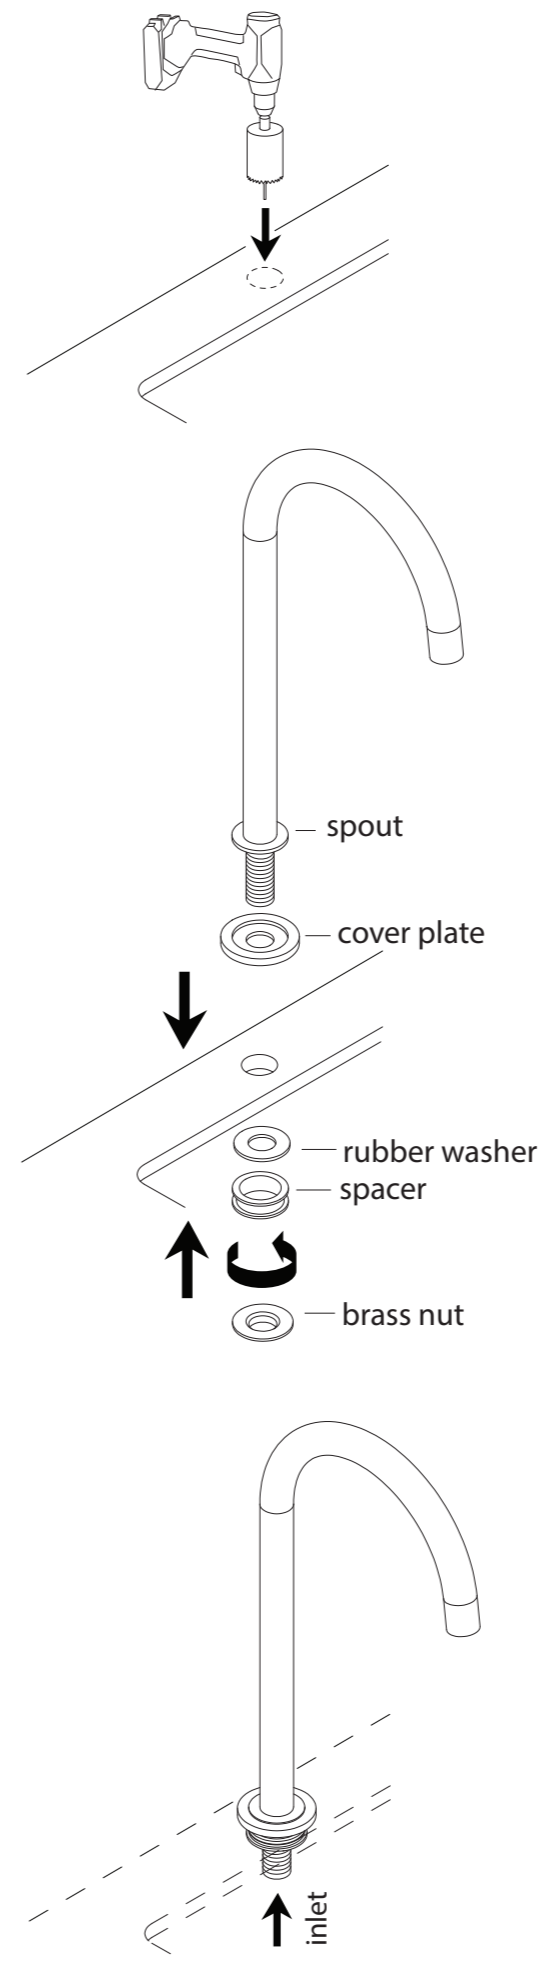

- 1 Mark out desired location of spout.  
Cut hole using a **25mm** hole saw.  
**Note:** If cutting a stone benchtop it will need to be cut in a controlled environment by a licensed tradesperson as per OH&S regulations.

- 2 Fix spout to benchtop with brass nut ensuring cover plate is fitted above the bench and the rubber washer and spacer is fitted to underside of benchtop.

- 3 Connect pipework to inlet of spout.

IN THE BOX		1x spout
		1x cover plate
		1x spacer (if required)
		1x rubber washer
		1x brass nut