

Note: Dimensions are nominal measurements only


SPECIFICATIONS	
RECOMMENDED USE	Domestic
TEMPERATURE RATING	Maximum continuous working temperature 75°C If the water temperature exceeds 75°C, an approved tempering valve must be fitted
STANDARDS	Nominal Flow Rate(5.5 L/M)

Disclaimer: Products in this specification manual must by regulation be installed by licensed and registered trade people. The manufacturer/distributor reserves the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. Dimensions and set-outs listed are correct at time of publication however the manufacturer/distributor takes no responsibility for printing errors. All ABI Products are designed in Australia. Copyright ABI Interiors Pty Ltd 2021.

INSTALLATION GUIDE

Note: This product must be installed by a licensed plumber.

This is a general installation guide - there are many factors that are involved that can alter the installation method.

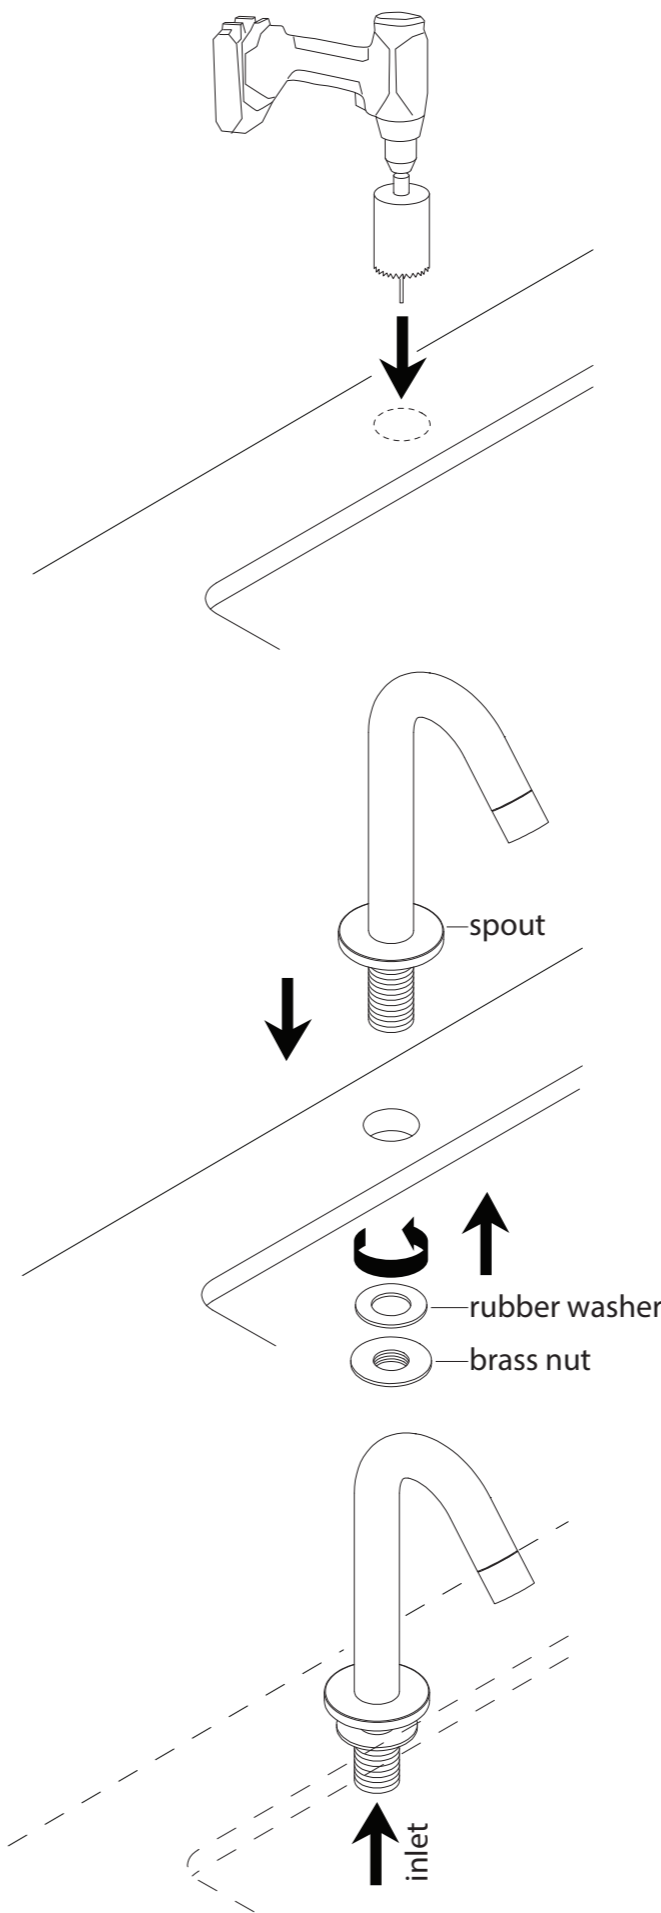

- 1 Mark out desired location of spout.

Cut hole using a **25mm** hole saw.

Note: If cutting a stone benchtop it will need to be cut in a controlled environment by a licensed tradesperson as per OH&S regulations.

- 2 Fix spout to benchtop with brass nut ensuring rubber washer is fitted to underside of benchtop.

- 3 Connect pipework to inlet of spout.

High Pressure

Low Pressure

Unscrew spout tip to change aerator for alternative pressure option.

IN THE BOX

1x spout

1x rubber washer

1x brass nut