



ASHER WALL HUNG TOILET PAN


WaterMark

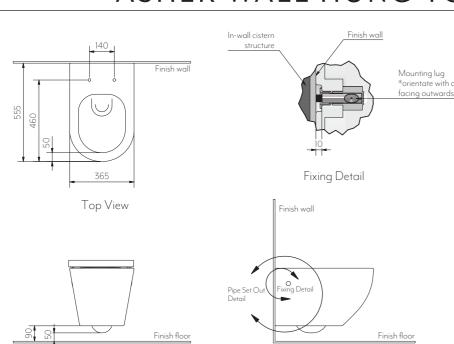

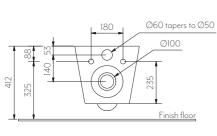

Front View

Back View

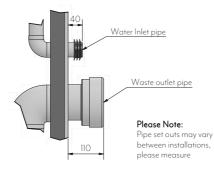

Pipe Set Out Detail

Side View

Note: Dimensions are nominal measurements only

SPECIFICATIONS	
RECOMMENDED USE	Domestic
MATERIAL	Pan: Glazed Porcelain Seat: Soft close - Hardened Polypropylene (PP)
INSTALLATION	Wall Mounted
TEMPERATURE RATING	Maximum continuous working temperature 75°C If the water temperature exceeds 75°C, an approved tempering valve must be fitted
PRESSURE RATING	Recommended minimum working pressure 150kPa Recommended maximum working pressure 500kPa Hot and cold water inlet pressure should be equal
STANDARDS	WELS Star Rating 4 star, Full flush: 4.4L, Half flush: 3L, Avg. flush: 3.3L, L07245, WMK25988 - AS 1172.2:2014


INSTALLATION GUIDE

Note: This product must be installed by a licensed tradesperson. This is a general installation guide - there are many factors that are involved that can alter the installation method. This product install must comply with AS/NZS 3500, for installs outside Australia and New Zealand, the standards in your respective country must be adhered to by your licensed tradesperson.




Note: For installation of the cistern, Please refer to **ABI WALL HUNG TOILET CISTERN** on the ABI website.

At the **Rough-in Stage** ensure the threaded rods are inserted and that they will protrude sufficiently beyond your finish wall.

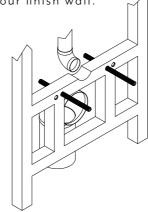


Use multi grip pliers to hold the threaded rod and then thread the mounting lug on. Allow a **10mm** gap from finish wall.

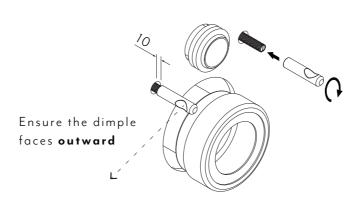


 $\overbrace{5}$ Attach pan to the mounting lugs.


Tip: Place packaging styrofoam underneath pan whilst you work.

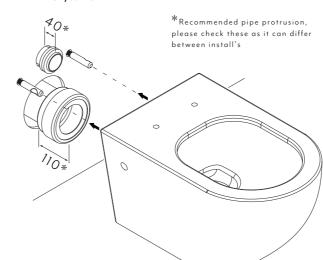


At the **Fit-off Stage** after all wall finishes are applied adjust the threaded rods to **35mm** protrusion from the finish wall.*

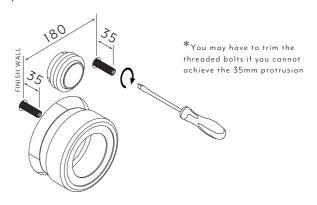

Attach the mounting plugs and nuts to the pan. Before tightening, be sure to orientate the threads outward to align with side holes.

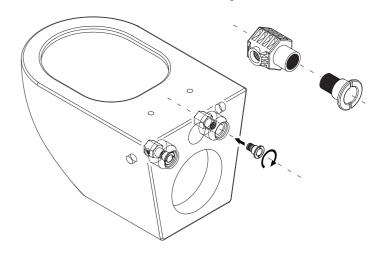

- 6 1. Insert the set screws and fasten.
- 2. Place caps over the holes.

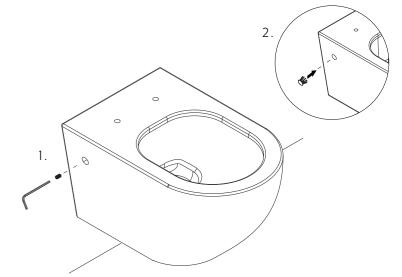


Disclaimer: Products in this specification manual must by regulation be installed by licensed and registered trade people. The manufacturer/distributor reserves the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. Dimensions and set-outs listed are correct at time of publication however the manufacturer/distributor takes no responsibility for printing errors. All ABI Products are designed in Australia. Copyright ABI Interiors Pty Ltd 2021.



1. Use a screwdriver to attach the toilet seat brackets.


2. Slide toilet seat clips over the brackets.

3. Adjust brackets and push seat on.

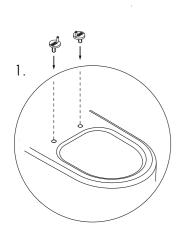

In the Box

- 1. Pan
- 2. Caps [x2]
- 3. Mounting Lug [x2]
- 4. Toilet Seat Bracket [x2]
- 5. Toilet Seat Clip [x2]
- 6. Toilet Seat
- 7. Mounting Plug Nut [x2]
- 8. Mounting Plug [x2]
- 9. Set Screw [x2]
- 10. Allen Key 6mm

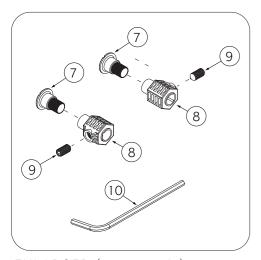

ENLARGED (not to scale)

