



BARRE ASSEMBLY TAPS

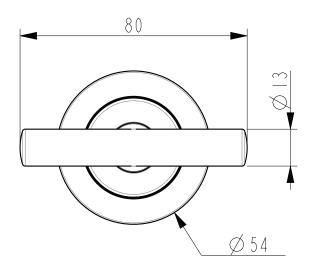

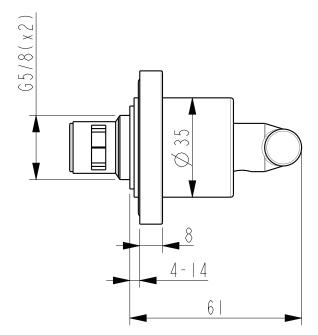



Note: Dimensions are nominal measurements only

SPECIFICATIONS	
RECOMMENDED USE	Domestic
PRESSURE RATING	Recommended minimum working pressure 150kPa Recommended maximum working pressure 500kPa Hot and cold water inlet pressure should be equal
TEMPERATURE RATING	Maximum continuous working temperature 75°C If the water temperature exceeds 75°C, an approved tempering valve must be fitted
SUITABLE HOT WATER UNITS	Storage tank: Yes Continuous Flow: Yes Gravity Feed: Not suitable
STANDARDS	WELS Star Rating(5 Star) – Nominal Flow Rate(5.5 L/M) Registration No.(T32357, T32357 (V))

INSTALLATION GUIDE

Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors that are involved that can alter the installation method.






New Build

Install breach in desired position.


Retrofitting Existing

Remove existing tapware & reseat existing body seats until shiny & smooth.


Screw spindle into breach and hand tighten until rear of spindle meets the body seat, **be sure not to overtighten**. If necessary apply more pressure lightly with spanner. (Note: Locking nut must be removed prior to installing this part of the spindle)

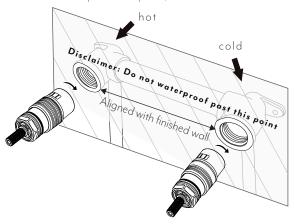

Install the sleeve onto the locking nut, twisting until tightened.

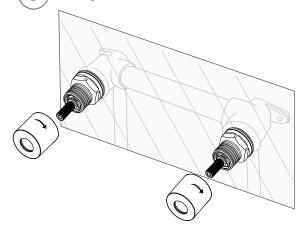


[5] Install handle by using the allan key provided and tighten grub screw.

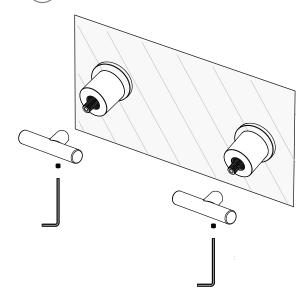





Fit the fibre washer over the spindle. Screw on the locking nut and tighten with spanner.

TEST AND CHECK FOR LEAKS

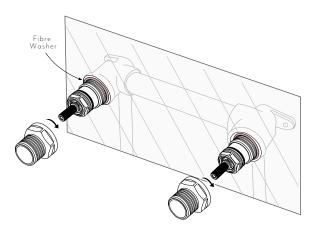

Slide the dress plate over the sleeve and press against wall.

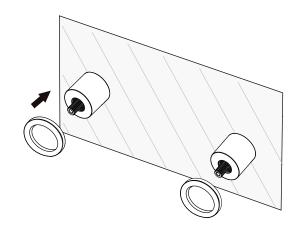

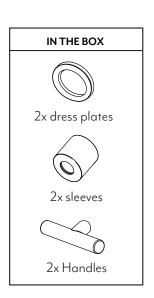


TYPICAL ASSEMBLY TAP EXAMPLES


Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors that are involved that can alter the installation method.



Example One: Offset basin mixer/bath spout setup

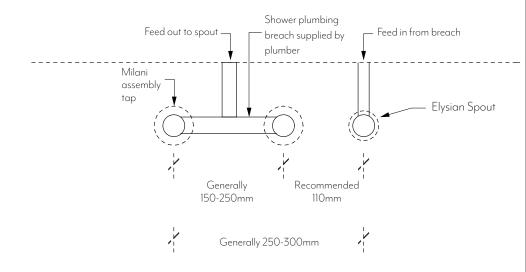

Example Two: Centred basin mixer/bath spout setup

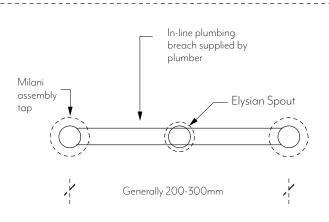

Example Three: Shower Setup

