




ESME WALL MOUNTED BASIN

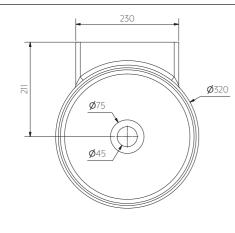


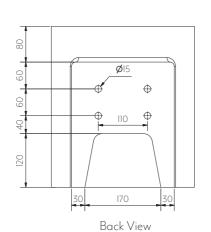

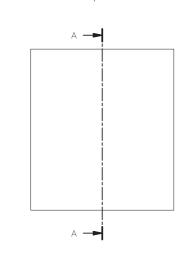

Front View

Top View

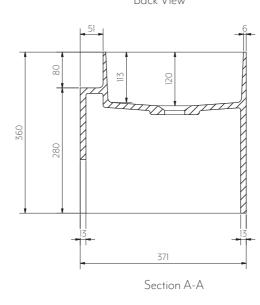

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE

MATERIAL

Solid Surface

INSTALLATION

Wall Mount

OVERFLOW

No

CAPACITY

8L

RIM THICKNESS

6mm


Wall Mount Spout/Mixer

Disclaimer: Products in this manual must by law be installed by licensed and registered tradespeople in accordance with the relevant standards. ABI and the manufacturer/distributor reserve the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. The information listed is correct at the time of publication, however ABI and the manufacturer/distributor takes no responsibility for printing errors. Copyright © ABI Interiors 2021


INSTALLATION GUIDE

Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors that are involved that can alter the installation method. This product install must comply with AS/NZS 3500.



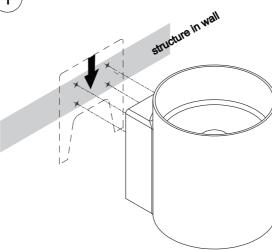


Hold basin against wall aligning outlet of trap with waste pipe. Extend telescopic trap up or down to find desired height & cut waste to suit trap.

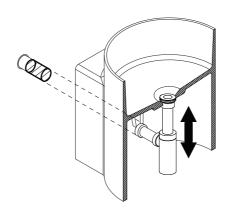


Secure plumbing to basin and wall outlet.
Test by running water through the waste.
Place the cover plate over drain.

Silicon top and sides of basin if necessary.

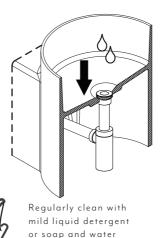





Fit waste and trap to basin.

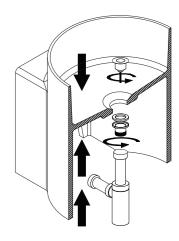

4 If correct height and position is suitable, level the top of the basin & mark out desired position.

Drill holes through the back of basin into structure within wall with a wood drill bit in a rectangle 10mm across and 60 mm high. Fix basin into structural support in wall.

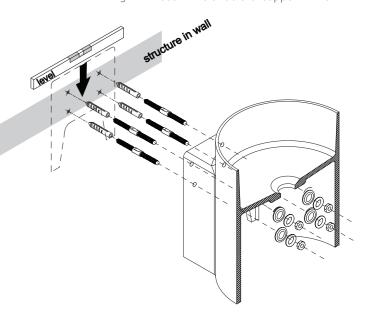

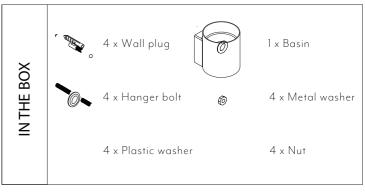

DO NOT use cream cleaners or bleach. These substances are abrasive



DO NOT use cleaning pads with abrasive surfaces as this may scratch the material