

**Note:** Dimensions are nominal measurements only

## SPECIFICATIONS

### RECOMMENDED USE

Domestic


### MATERIAL

Solid Brass

## INSTALLATION GUIDE

Note: This product must be installed by a licensed tradesman. This is a general installation guide - there are many factors that are involved that can alter the installation method.

- 1 Measure centre to centre, brass fixing holes in rail.
- 2 Measure & mark desired position of the rail on the wall.
- 3 Drill holes with masonry drill bit & fit the plugs using a rubber mallet.
- 4 Remove all mountings with the supplied allen key.
- 5 Screw the mountings into the plugs.
- 6 Fit shower rail onto the mountings to wall using the allen key.

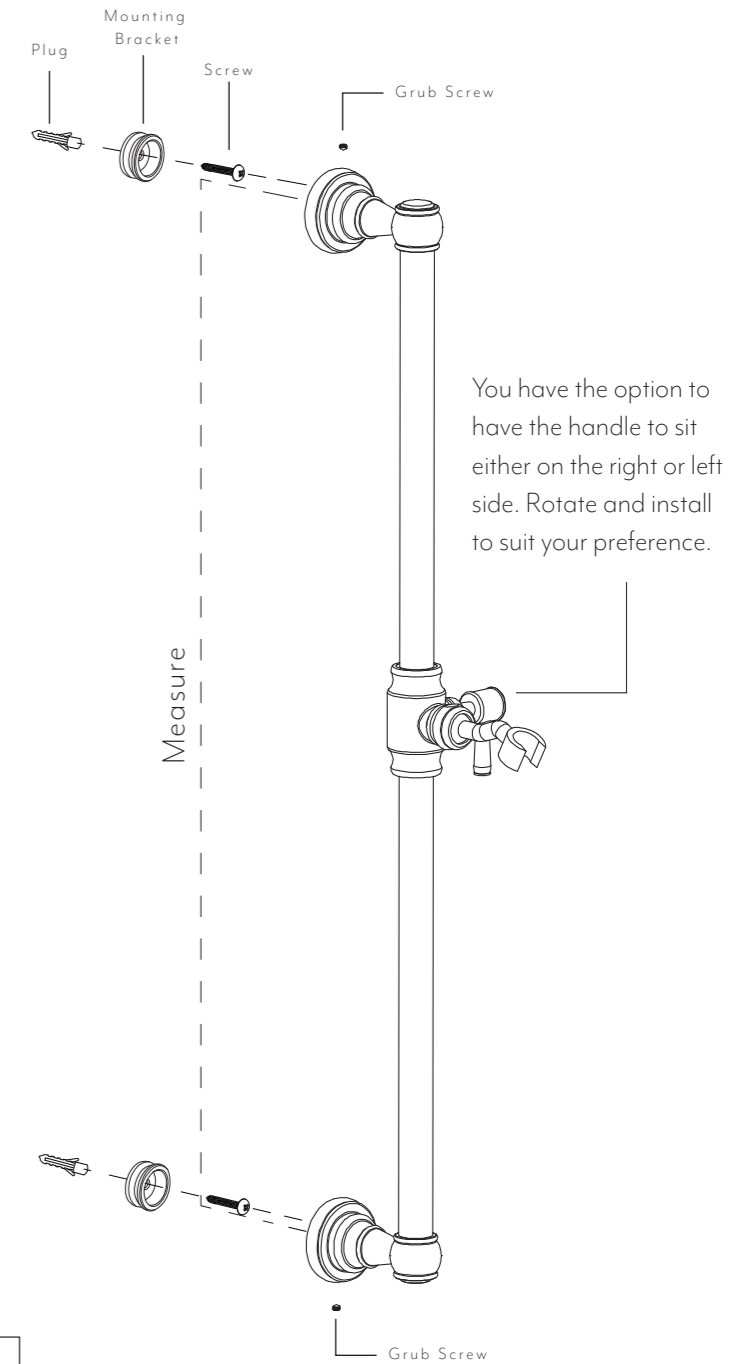


IN THE BOX		2 x Plugs		1 x Shower Rail
		2 x Mounting Brackets		
		2 x Screws		
		2 x Grub Screws		1 x Allen Key



Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

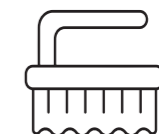

DO NOT use cleaning pads with abrasive surfaces as this may scratch the material