

**Disclaimer:** When Using the Kingsley Towel Rail as a Laundry Rail, ABI recommends using a non-metal coat hanger to avoid damaging the product.

**Note:** Dimensions are nominal measurements only

## SPECIFICATIONS

### RECOMMENDED USE

Domestic

### FIXING DISTANCE

800 mm (centre to centre)

### MATERIAL

Solid Brass


Disclaimer: Products in this specification manual must by regulation be installed by licensed and registered trade people. The manufacturer/distributor reserves the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. Dimensions and set-outs listed are correct at time of publication however the manufacturer/distributor takes no responsibility for printing errors. All ABI Products are designed in Australia. Copyright ABI Interiors Pty Ltd 2021.

## INSTALLATION GUIDE

This product must be installed by a licensed tradesperson. This is a general installation guide - there are many factors that are involved that can alter the installation method.

- 1 Using the fixing bracket as a guide, drill holes in desired position and insert wall plugs.
- 2 Remove brackets from the towel rail using the allen key to loosen the grub screws. Install brackets by fastening the supplied screws into the wall plugs.
- 3 Place the towel rail onto the brackets and firmly tighten grub screws using allen key.

**IMPORTANT** - If installing onto plasterboard please use appropriate fixings.

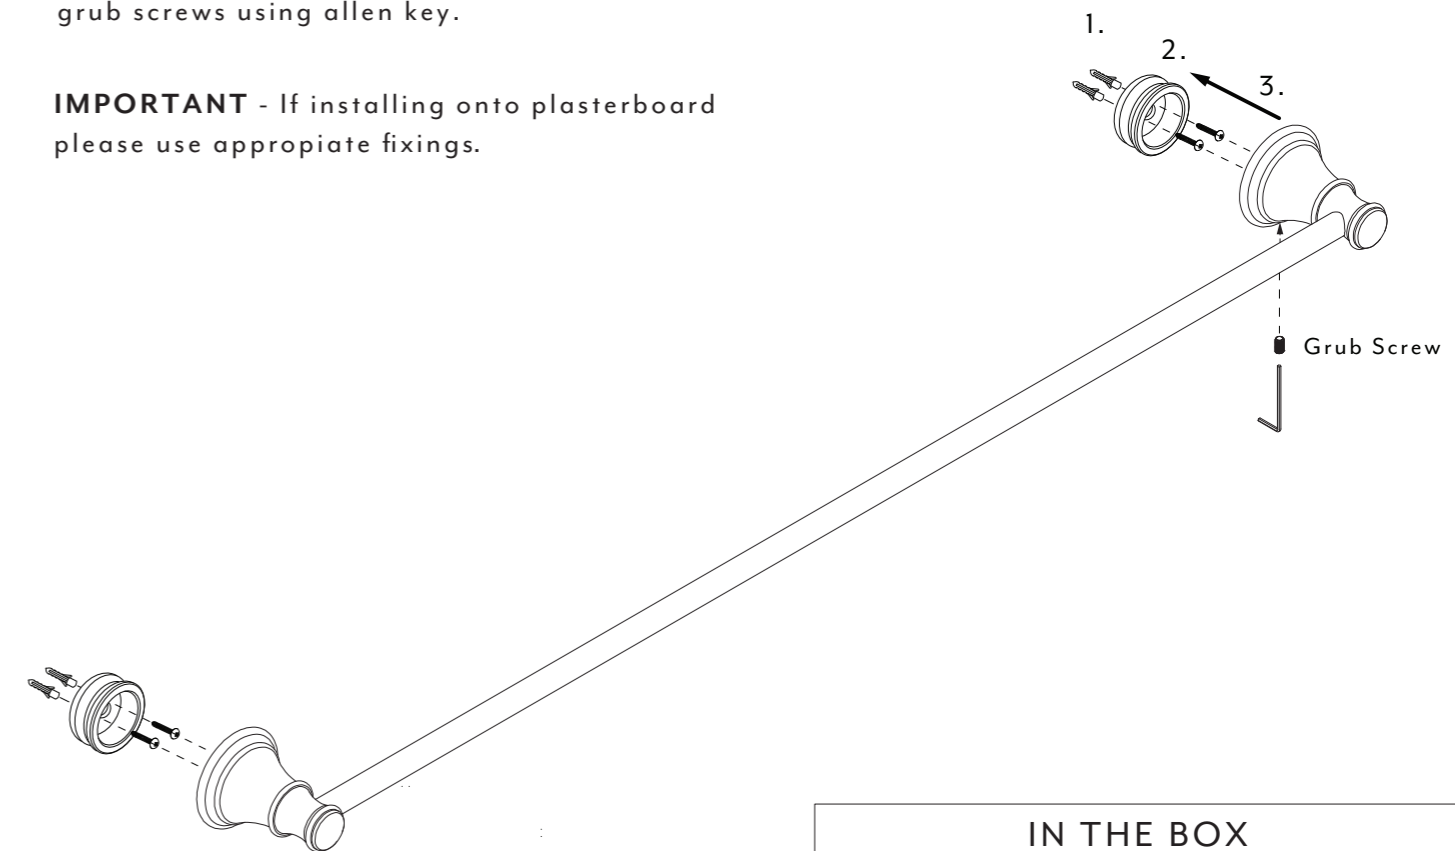

## IN THE BOX




2x Wall Brackets



4x Fixing Screws



4x Wall Plugs

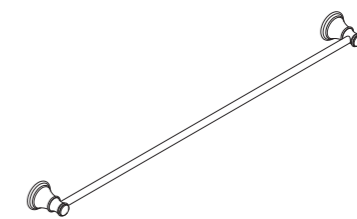

1x Towel Rail




1x Allen Key



Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

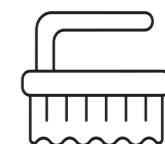

DO NOT use cleaning pads with abrasive surfaces as this may scratch the material