


## KIVA SEMI INSET BASIN SINK

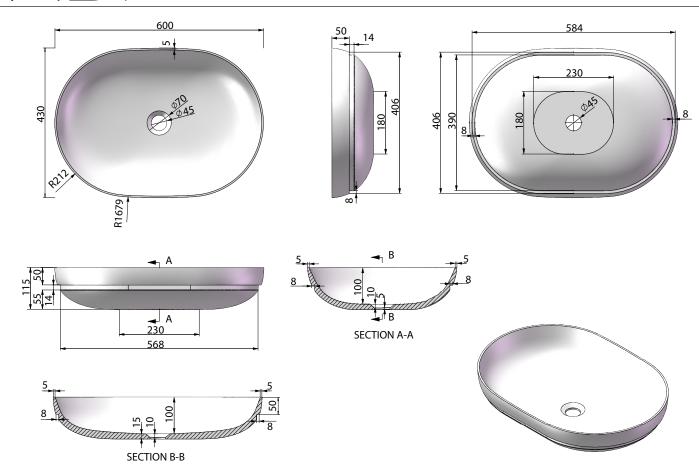


## **INSTALLATION GUIDE**

STEP 1: Mark out desired position in benchtop and use cutting template provided to create hole in benchtop to mount basin.

STEP 2: Install pop up waste & attach to plumbing

STEP 3: Seal basin to benchtop using recommended silicone

CUT-OUT TEMPLATE

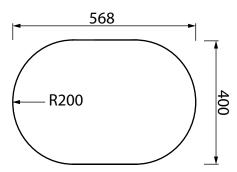

**Note:** Dimensions are nominal measurements only

## SPECIFICATIONS

RECOMMENDED USE	Domestic
MATERIAL	Solid Surface
INSTALLATION	Semi Inset
WARRANTY	Structure: 5 years   Finish: 5 years