



Top View (1:10)

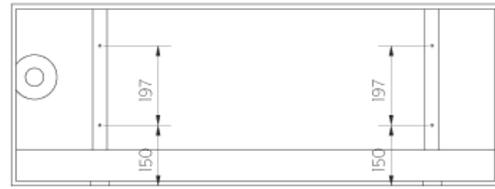


Bottom View (1:10)



Front View (1:10)

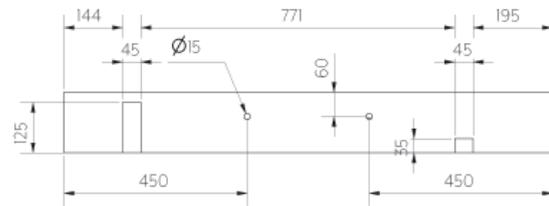

Back View (1:10)

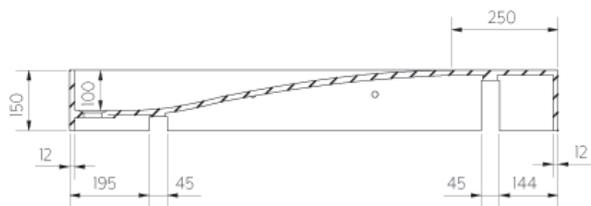

A-A (1:10)

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE

Domestic

COLOUR AVAILABILITY

Matte White

MATERIAL

Solid Surface

INSTALLATION

Wall Mounted

*To be used with a bench mounted mixer or a spout

OVERFLOW


N/A

INSTALLATION GUIDE


This product must be installed by a licensed tradesperson
This is a general installation guide - there are many factors that are involved that can alter the installation method.




- 1 Check the desired height of basin from floor.

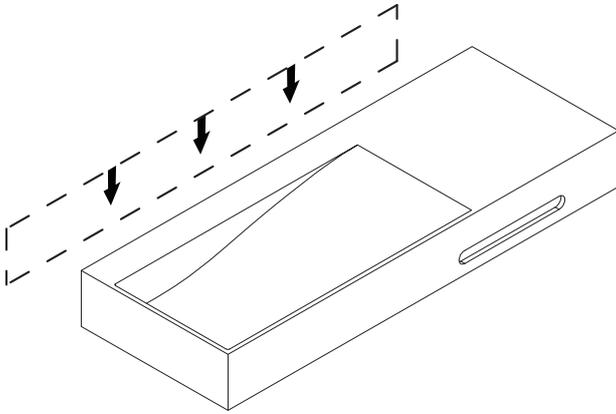


- 2 Fit brackets to underside of basin using fixings provided.

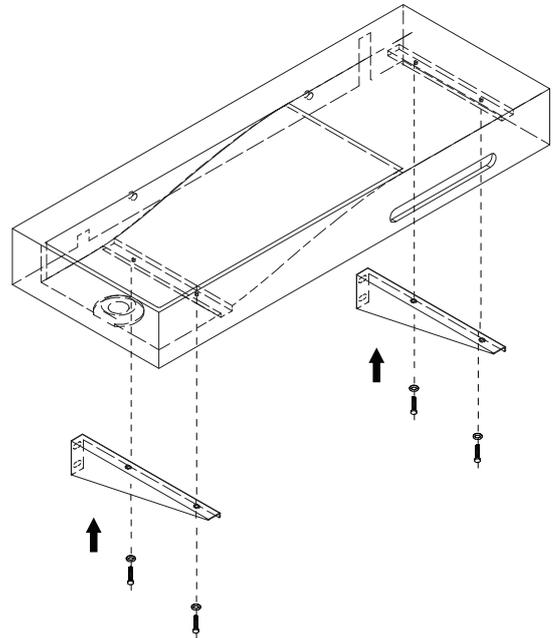

- 3 Fit pop up waste and trap to basin.

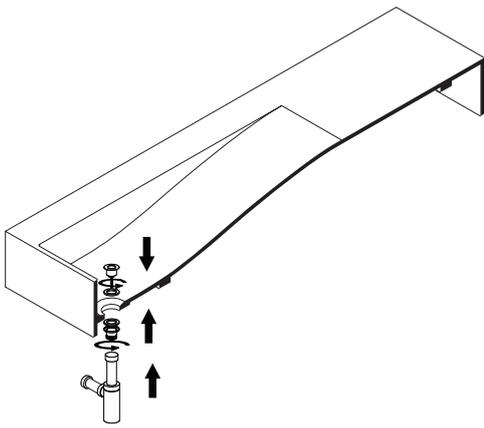


- 4 Hold basin against wall aligning outlet of trap with waste pipe. Extend telescopic trap up or down to find desired height & cut waste to suit trap.

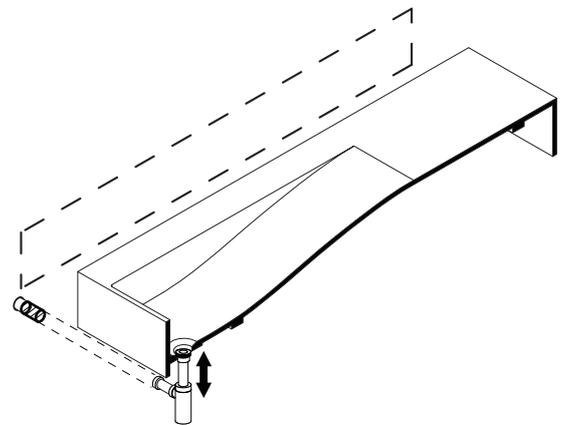

- 5 If correct height and position is suitable, level the top of the basin & mark out desired position.

Drill holes into structural support in the wall. Fix basin into structural support. **ABI takes no responsibility if vanity is not fixed into wall structure.**

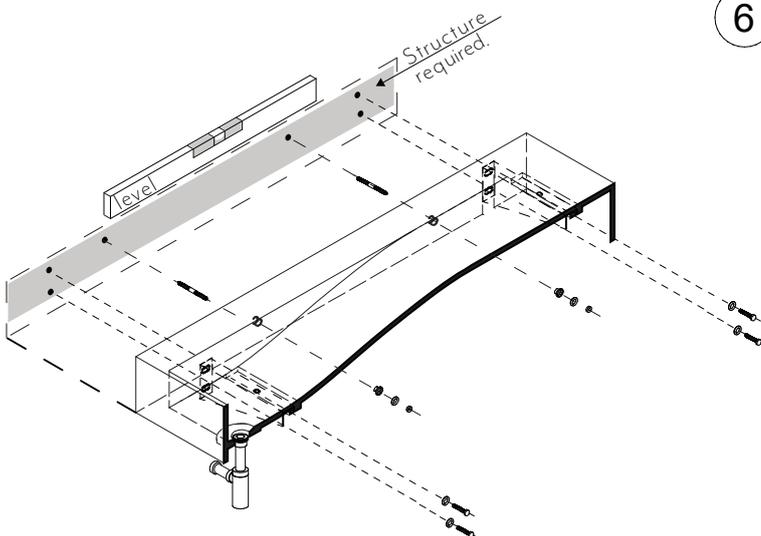

- 6 Secure plumbing to basin and wall outlet. Test by running water through the waste. Silicon top and sides of basin if necessary.

