


VALÉ WALL MOUNTED BASIN

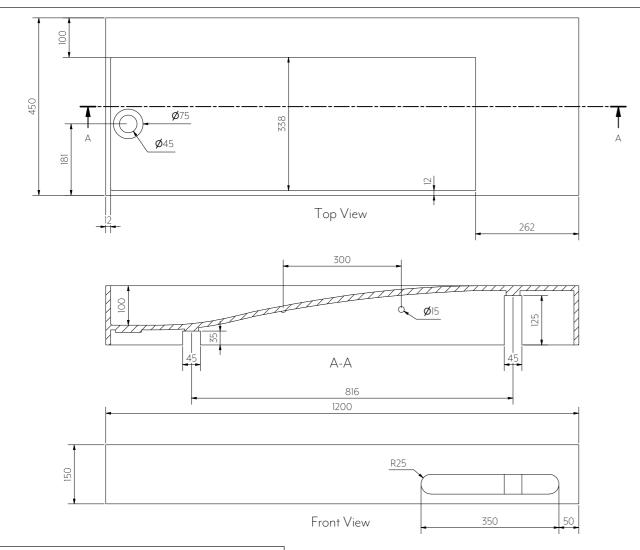

Note: Dimensions are nominal measurements only

RECOMMENDED USE MATERIAL Solid Surface INSTALLATION OVERFLOW No CAPACITY RIM THICKNESS 12mm Wall Mount Spout/Mixer


Disclaimer: Products in this manual must by law be installed by licensed and registered tradespeople in accordance with the relevant standards. ABI and the manufacturer/distributor reserve the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. The information listed is correct at the time of publication, however ABI and the manufacturer/distributor takes no responsibility for printing errors. Copyright © ABI Interiors 2021

INSTALLATION GUIDE


Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors that are involved that can alter the installation method. This product install must comply with AS/NZS 3500.



1) Check the desired height of basin from floor.

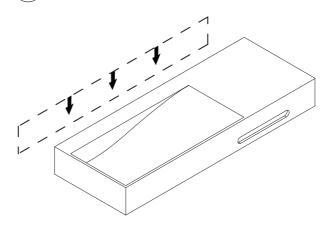


3) Fit pop up waste and trap to basin.

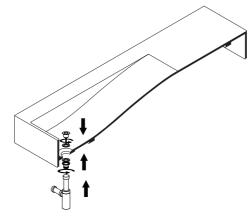


f correct height and position is suitable, level the top of the basin & mark out desired position.


Drill holes into structural support in the wall. Fix basin into structural support. *ABI* takes no responsibility if vanity is not fixed into wall structure.

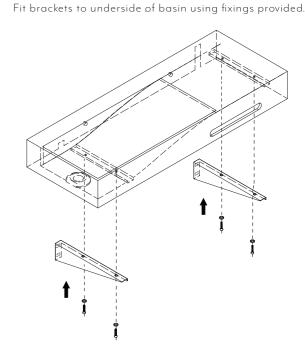


Hold basin against wall aligning outlet of trap with waste pipe. Extend telescopic trap up or down to find desired height & cut waste to suit trap.

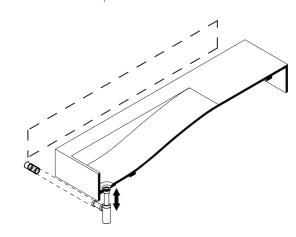

Secure plumbing to basin and wall outlet. Test by running water through the waste. Silicon top and sides of basin if necessary.

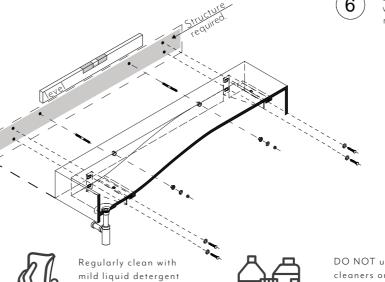

or soap and water

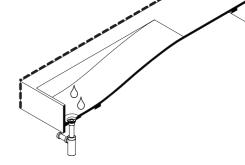

DO NOT use cream cleaners or bleach. These substances are abrasive



DO NOT use cleaning pads with abrasive surfaces as this may scratch the material